


## Horn Button


The horn button ① is located on the left handle grip switch housing. Press this button to operate the horn.

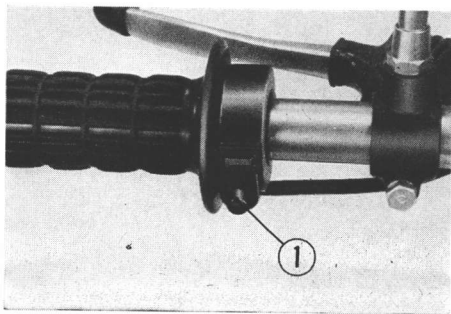

① Horn button

## Steering Lock

The steering lock ① is located on the steering stem directly below the headlight case. Turn the handle bar all the way to the steering stop, either to the left or right, insert the key into the lock, turn the key counterclockwise 60° and press in, turn the key back to the original position and remove the key. This locks the steering to prevent theft.

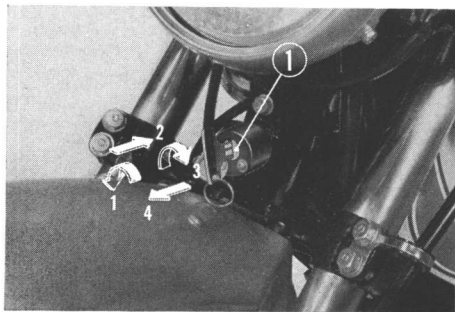

① Steering lock