

- ③ Grip play lower adjuster  
 ④ Throttle crank    ⑤ Lock nut


lock nut after adjustment. Check for smooth rotation and snap back tension of the throttle grip from the full open to the full closed positions with the steering to the full right and left as well as straight ahead.

Inspect the condition of the throttle cable housings and the cables for kinks, chafing and improper routing.

## Carburetor Adjustment

The carburetor should be adjusted only after the engine has attained operating temperature.

1. Adjust the idle speed screw ① until the engine idles at approximately 1,200 R.P.M. Turn the idle speed screw clockwise to increase idle speed or counterclockwise to decrease idle speed.
2. Turn the air screw ② clockwise until you hear the engine miss or decrease

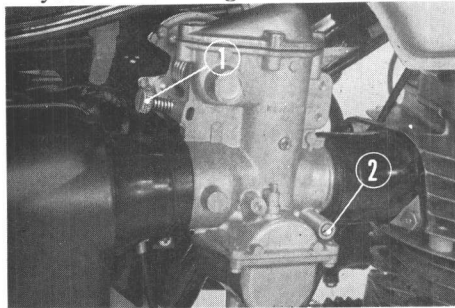

- ① Idle speed screw    ② Air screw