


## Front Suspension Inspection


Check front fork action by locking the front brake and pumping the forks up and down several times. The suspension should function smoothly, with no oil leakage from the fork legs. Damaged, binding, or leaking front forks should be repaired before the motorcycle is operated. Check security of all front forks and handlebar mounting bolts illustrated below.

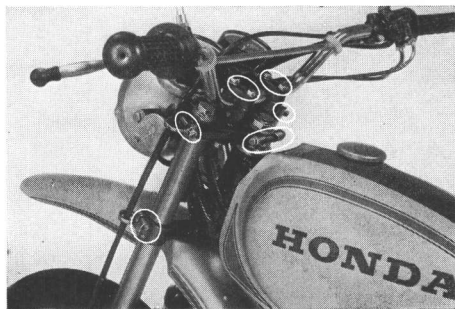

## Front Fork Oil Change

Oil in both front fork legs should be changed at least once a year.

1. Remove drain plugs ② from each fork leg and pump the forks several times to ensure complete draining.
2. Reinstall drain plugs and block up the front of the motorcycle.
3. Remove the handlebars and the oil filler plugs ①.

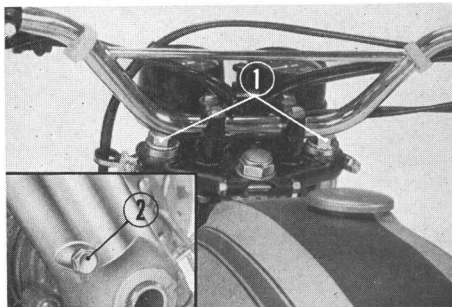

- ① Oil filler plugs  
② Drain plug