


Fuse :

The fuse holder ① is located on the frame pipe shown below. The recommended fuse for the XL-250 is 10A. When frequent failure of the fuse occurs, it usually indicates a short circuit or an overload in the electrical system. In this case the electrical system should be checked visually for shorts or other possible malfunctions. If the problem cannot be located visually, the motorcycle should be examined by an authorized Honda dealer.

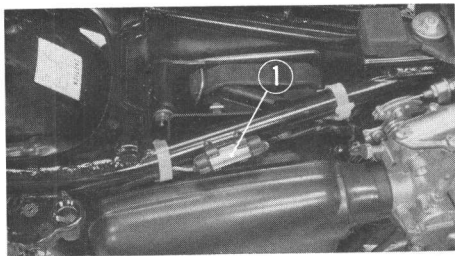


① Fuse holder

Headlight Beam Adjustment

The headlight must be kept properly adjusted for safe nighttime riding.

Vertical adjustment is made by pivoting the headlight case on its mounting bolts ①.

Horizontal adjustment is made by turning the adjusting screw ② located on the headlight rim.

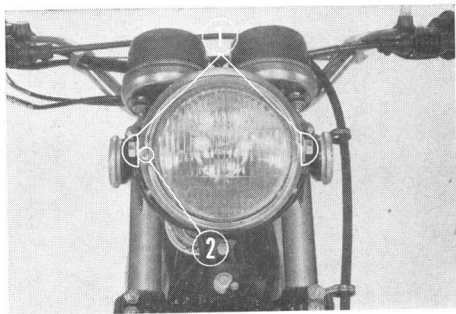

- ① Headlight mounting bolts
- ② Adjusting screw