


Fuel Tank

Fuel tank capacity is 9.5ℓ (2.5 US gal) including 2.0ℓ (0.5 US gal) in the reserve supply. To open the filler cap (1), pull out the breather tube (2) from the steering stem nut. Then turn the filler cap counter-clockwise.

Any automotive gasoline with a pump octane number ($\frac{R + M}{2}$) of 86 or higher, or a research octane number of 91 or higher may be used. If “knocking” or “pinging” occurs, try a different brand of gasoline or a higher octane grade.

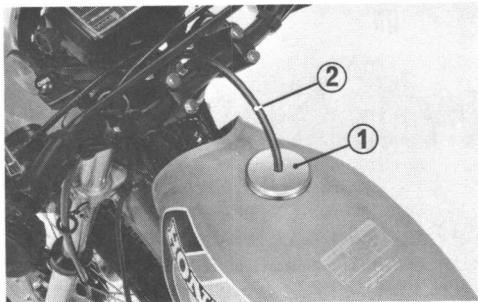

18 (1) Fuel filler cap (2) Breather tube

After refueling, be sure to tighten the fuel filler cap firmly by turning clockwise. Insert the breather tube into the steering stem nut.

WARNING

- * *Gasoline is extremely flammable and is explosive under certain conditions. Refuel in a well ventilated area with the engine stopped. Do not smoke or allow open flames or sparks in the area where the motorcycle is refueled or where gasoline is stored.*
- * *Do not overfill the tank (there should be no fuel in the filler neck). After refueling, make sure the filler cap is closed securely.*
- * *Avoid repeated or prolonged contact with skin or breathing of vapor. KEEP OUT OF REACH OF CHILDREN.*

CAUTION

- * *Gasoline may damage paint of the air cleaner cover. Avoid contact with the surface of the air cleaner cover.*