


Fuse Replacement

The fuse holder (1) located on the right side of the battery compartment.

The specified fuse is 10A.

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair. Spare fuses (2) are provided in the battery cover (3).

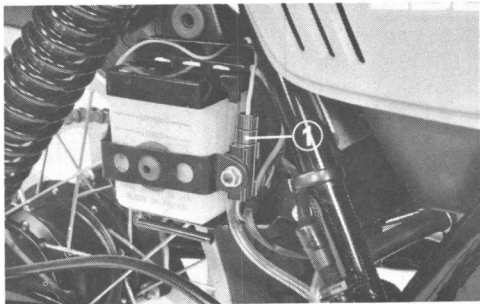


(1) Fuse holder

WARNING

- * *Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power at night or in traffic.*

CAUTION

- * *Turn the ignition switch "OFF" before checking or replacing the fuses to prevent accidental short-circuiting.*

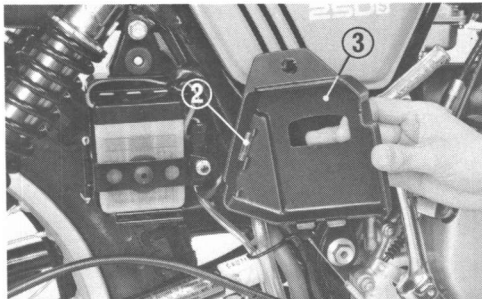

(2) Spare fuse (3) Battery cover