


Rear Wheel Removal


To remove the rear wheel, proceed as follows:

1. Place a wood block under the engine and raise the rear wheel off the ground.
2. Remove the rear brake adjusting nut ①.
3. Remove the brake panel stopper arm attaching bolt ②.

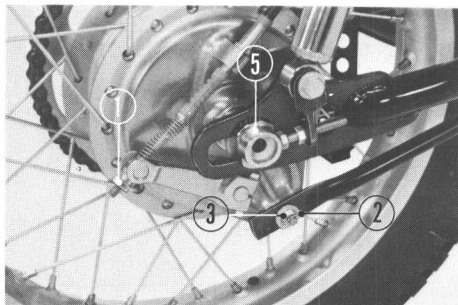

- ① Rear brake adjusting nut
② Brake panel stopper arm attaching bolt

4. Remove the cotter pin ③ from rear axle nut.
5. Remove the rear axle nut ④, and pull out the rear axle ⑤, and then the rear wheel can be removed.
6. To install the rear wheel, reverse the removal procedure outlined in steps 1 through 5.

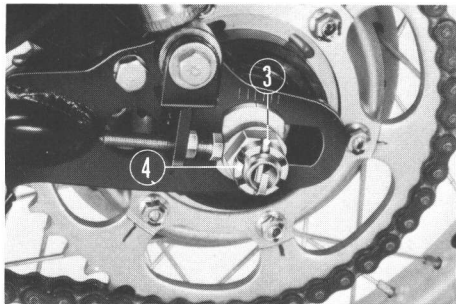

- ③ Cotter pin ⑤ Rear axle
④ Rear axle nut