


## Stoplight Switch Adjustment

These switches operate the stoplight when the front or rear brake is applied. The front brake switch is incorporated in the front brake system and requires no adjustment. The rear brake switch, which is an adjustable plunger type is located near the rear brake pedal.

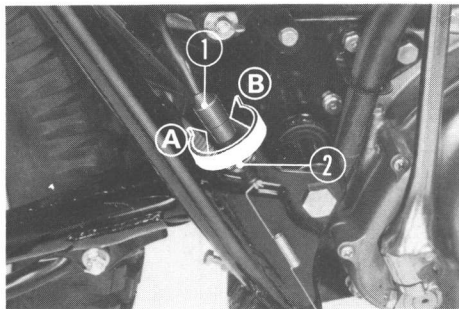

① Stoplight switch

② Adjusting nut

The stoplight switch ① must be adjusted so that the stoplight will come on when the rear brake is applied. Rear brake free play (page 55), should be adjusted before performing the stoplight switch adjustment. The procedure for adjusting the stoplight switch is as follows:

1. Turn the main switch to the "ON" position.
2. Turn the adjusting nut ② to position the stoplight switch at a point where the stoplight will come on when the brake pedal is depressed. Turn the adjusting nut in direction ④ to advance switch timing or in the opposite direction ⑤ to retard switch timing.