



Brakes

Refer to *Safety Precautions* on page 43.

Front Brake Lever Freeplay

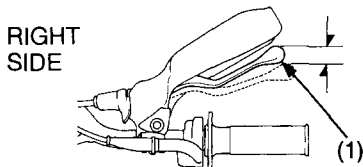

(1) front brake lever

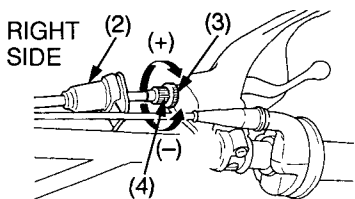

(2) dust cover
(3) lock nut
(4) front brake
cable adjuster

(+) increase freeplay
(-) decrease freeplay

Inspection

Check freeplay (1) by pulling in slowly on the front brake lever until the brake starts to engage.

Freeplay: 20–30 mm (3/4 - 1 1/2 in)

If necessary, adjust to the specified range.

Adjustment

1. Pull the rubber dust cover (2) back.
2. Loosen the lock nut (3) and turn the front brake cable adjuster (4).
3. Tighten the lock nut. Return the dust cover to its normal position.
4. Adjust the brake, release it, then spin the wheel and check that it rotates freely. Repeat this procedure several times.