

Storing Your Honda

4. Wash and dry your motorcycle.
5. Lubricate the drive chain.
6. Inflate the tires to their recommended pressures.
7. Place your motorcycle in an unheated area, free of dampness, with a minimum of daily temperature variation.
8. If you cover your motorcycle, use a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.

Removal from Storage

1. If your motorcycle has been stored for more than four months — change the engine oil.
2. If your motorcycle has been stored for more than two months *without* a fuel stabilizer — drain and replace the fuel.

If your motorcycle has been stored for more than 12 months *with* a fuel stabilizer — drain and replace the fuel.

- 3 Lubricate the drive chain.
4. Perform a pre-ride inspection (page 25), then test-ride the motorcycle at low speeds.