

Rear Brake Fluid Level:

▲WARNING


- * **Brake fluid may cause irritation. Avoid contact with skin or eyes. In case of contact, flush thoroughly with water and call a doctor if your eyes were exposed.**
- * **KEEP OUT OF REACH OF CHILDREN.**

CAUTION:

- * **Handle brake fluid with care because it can damage plastic and painted surfaces.**
- * **When adding brake fluid, be sure the reservoir is horizontal before the cap is removed or brake fluid may spill out.**
- * **Use only DOT 4 brake fluid from a sealed container.**
- * **Never allow contaminants such as dirt or water to enter the brake fluid reservoir.**

Check that the fluid level is above LOWER level mark (1) with the motorcycle in an upright position.

Brake fluid must be added to the reservoir whenever the fluid level begins to reach the LOWER level mark (1). Remove the reservoir stay mount bolt (2). Make sure you keep the reservoir in a level position. Remove the reservoir cap (3). Fill the reservoir with DOT 4 BRAKE FLUID from a sealed container up to the UPPER level mark (4). Tighten the reservoir cap securely.

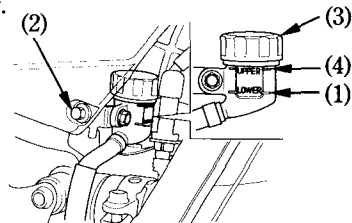

- | | |
|-------------------------------|----------------------|
| (1) LOWER level mark | (3) Reservoir cap |
| (2) Reservoir stay mount bolt | (4) UPPER level mark |