

INTENANCE SCHEDULE

Perform the Pre-ride Inspection (page 42) at each scheduled maintenance period.
 I: INSPECT AND CLEAN, ADJUST, LUBRICATE OR REPLACE IF NECESSARY
 C: CLEAN R: REPLACE A: ADJUST L: LUBRICATE

ITEMS	FREQUENCY	WHICHEVER → COMES FIRST ↓ NOTE	INITIAL MAINT.	REGULAR MAINT. INTERVAL				Refer to page
			x100km	10	20	30	40	
			x100mi MONTH	1	6	12	18	
* FUEL LINE					I		I	-
** FUEL STRAINER SCREEN					C		C	-
* THROTTLE OPERATION					I		I	70-71
AIR CLEANER	NOTE1			C	C	C	C	60-61
SPARK PLUG				I	I	I	I	67-68
* VALVE CLEARANCE			I	I	I	I	I	-
ENGINE OIL			R	R	R	R	R	62-66
ENGINE OIL FILTER			R	R	R	R	R	65-66
* ENGINE OIL STRAINER SCREEN IN DOWN TUBE					C		C	-
* DECOMPRESSOR SYSTEM			I	I	I	I	I	46
** ENGINE IDLE SPEED			I	I	I	I	I	69
DRIVE CHAIN	NOTE1		I,L	Every 500km(300mi) or every 3 month:I,L				73
DRIVE CHAIN SLIDER				I	I	I	I	74