

CAUTION:

*** To fill the oil tank up to the upper level, oil should be added in two steps.**

5. With the motorcycle upright on firm level ground.
6. Fill the oil tank with the specified oil (See page 62) up to the upper level mark and install the oil filler cap/dipstick.
7. Start the engine and let it idle for 5 minutes. During idling, support the motorcycle in an upright position on a firm, level surface to assure an accurate oil level reading. Stop the engine.
8. Immediately remove the oil filler cap/dipstick and add the specified oil up to the upper level mark.
9. Reinstall the oil filler cap/dipstick. Check for oil leaks.

CAUTION:

- * Running the engine with insufficient oil can cause serious engine damage.**
- * Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.**

NOTE:

- * Please dispose of used engine oil in a manner that is compatible with the environment. We suggest you take it in a sealed container to your local recycling center or service station for reclamation. Do not throw it in the rubbish or pour it on the ground or down a drain.**