

Battery removal & installation

Removal:

1. Remove left side cover
2. Remove negative terminal bolt and disconnect the negative lead.
3. Remove positive terminal bolt and disconnect the positive lead.
4. Remove lower battery holder bolts.
5. Remove upper battery holder bolt and collar to remove the battery holder.
6. Remove the battery.

Installation:

Reverse the above procedure to re-install the battery.

Always connect the positive terminal lead first. Firmly secure the terminal bolts/nuts.

