


Side Cover Removal

Refer to *Safety Precautions* on page 45.

RIGHT SIDE

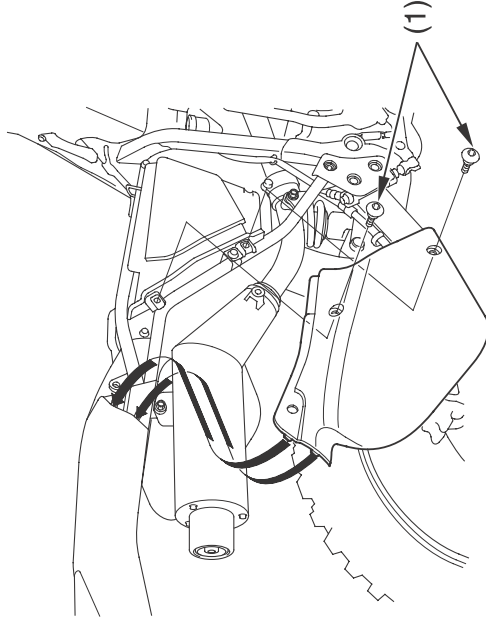

(1) bolts

Removal

1. Remove the right seat bolt (page 60).
2. Use a hex wrench to remove the two bolts (1).
3. Pull the side cover out.

Installation

1. Slide the top of the side cover under the bottom edge of the seat.
2. Align the tabs to the cutout of the rear fender.
3. Install the securing bolts and tighten them.
4. Tighten the seat bolt.

Use the same procedure to remove and install the left side cover.

