

03/05/20 10:05:04 31KCY680_069

Seat Removal

Refer to *Safety Precautions* on page 45 .

The seat must be removed to adjust rear suspension pre-load.

A technical line drawing of a motorcycle seat and its mounting hardware. The seat is shown from a top-down perspective, slightly angled. Five numbered callouts with arrows point to specific components: (1) points to a bolt on the rear edge of the seat; (2) points to a slot on the front edge; (3) points to a pin on the rear edge; (4) points to prongs on the bottom of the seat; (5) points to hooks on the bottom of the seat. Dashed lines indicate the seat's position relative to the motorcycle frame.

(1) bolts
(2) slot
(3) pin
(4) prongs
(5) hooks

Removal

1. Remove the two bolts (1) securing the seat.
2. Slide the seat back.

Installation

1. Align the locating slot (2) under the front of the seat with the pin (3) on the rear of the fuel tank.
2. Align the locating prongs (4) on the bottom of the seat with the hooks (5) on the frame.
3. Slide the seat into position.
4. Install the bolts and tighten them.

60 Servicing Your Honda