


## Engine Oil

8. Insert the dipstick and screw it in tightly.
9. Check for oil leaks.

The engine contains a crankcase oil level check bolt (4). Remove the bolt and check that the level is flush with the lower edge of the hole. If it is, install and tighten the bolt, start the engine and check the engine oil level. If the crankcase oil level is low, add the recommended engine oil before starting the engine to check the engine oil level.

RIGHT SIDE

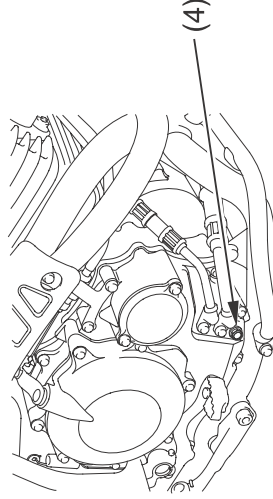

(4) check bolt

**68** Servicing Your Honda



### Changing Engine Oil & Filter

Your motorcycle's oil filter has very specific performance requirements. Use a new genuine Honda oil filter specified for your model or a filter of equal quality.

#### NOTICE

*Using the wrong oil filter may result in leaks or premature engine damage.*

