

Engine Oil

7. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 145).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

8. Install the oil drain bolts and tighten to the specified torque:
Crankcase drain bolt:
18 lbf·ft (25 N·m , 2.5 kgf·m)
Frame drain bolt:
29 lbf·ft (39 N·m , 4.0 kgf·m)




Install a New Engine Oil Filter:

Change the oil filter after draining the engine oil.

9. Remove the oil filter bolts (3) and oil filter cover (4).

RIGHT SIDE

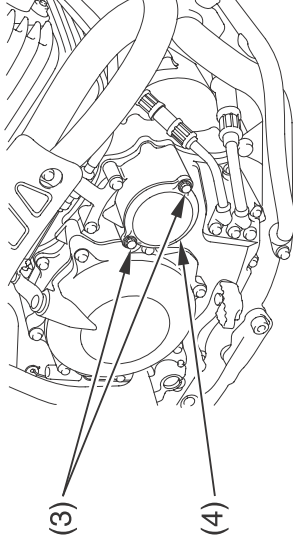

(3) oil filter bolts
(4) oil filter cover

