


## Suspension

### Front Suspension Air Pressure

The standard air pressure is 0 psi (0 kPa, 0 kgf/cm<sup>2</sup>). You may relieve accumulated air pressure in the fork legs by using the pressure release screws. The front wheel should be off the ground before you release the pressure.



FRONT

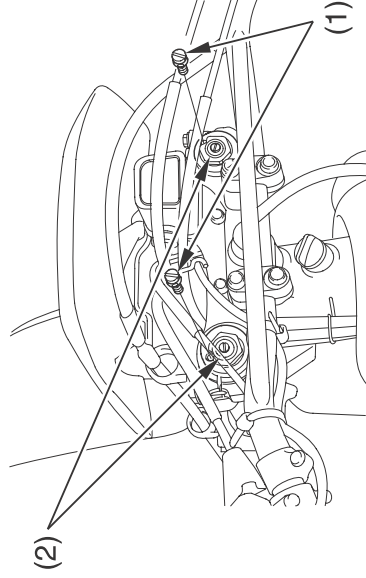

(1) pressure release screws  
(2) fork caps

