


## Lisence Light Bulb

1. Remove the lisence light by removing the two nuts (1).
2. Remove the lisence light cover (2) and lisence light socket (3) by removing the two nuts (4).
3. Pull out the bulbs (5).
4. Install a new bulb in the reverse order of removal.

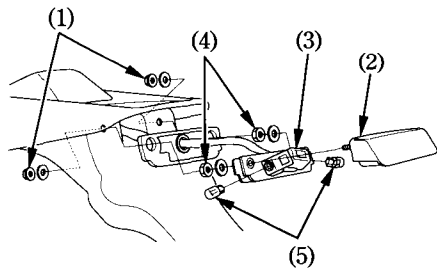

(1) Nuts

(2) Lisence light cover

(3) Lisence light socket

(4) Nuts

(5) Bulbs