

Quick Reference

Initial Maintenance	about 100 miles (150 km) or one month.
Regular Maintenance	about every 600 miles (1,000 km) or six months.
Pre-ride Inspection	Check the following items each time before you ride (page 27): tires, rims, leaks, engine oil, fuel, drive chain, cables, nuts & bolts, throttle, and brakes.
Fuel/Capacity	unleaded gasoline, pump octane number of 91 or higher tank: 0.79 US gal (3.0 ℓ, 0.66 Imp gal) reserve: 0.24 US gal (0.9 ℓ, 0.20 Imp gal)
Engine Oil	API Service Classification SF or SG; SAE 10W-40
Maximum Weight Capacity	88 lbs (40 kg) rider only (no passenger or cargo) and any accessories
Tires	Front: 2.50-10 33J , Rear: 2.50-10 33J
Tire Pressure (cold)	Front: 15 psi (100 kPa , 1.0 kgf/cm ²) Rear: 18 psi (125 kPa , 1.25 kgf/cm ²)
Spark Plug	CR6HSA (NGK) or U20FSR-U (DENSO)