

Maintenance Schedule

Items		Frequency	Whichever Comes First ⇒	Initial Maint.	Regular Maint. Interval				Refer to page:		
					mi	100	600	1,200		1,800	2,400
					km	150	1,000	2,000		3,000	4,000
					Note	Month	1	6		12	18
NON-EMISSION RELATED ITEMS		Drive Chain	Note 1	I, L	I, L: every 300 mi (500 km) or 3 months				98		
		Drive Chain Slider			I	I	I	I	99		
		Brake Shoe Wear			I	I	I	I	85		
		Brake System		I	I	I	I	I	82		
		Clutch System		I	I	I	I	I	70		
		Side Stand				I		I	97		
	*	Suspension				I		I	79		
	*	Spark Arrester				C: every 1,000 mi (1,600 km) or every 100 operating hours				77	
	*	Nuts, Bolts, Fasteners			I		I		I	—	
	**	Wheels/Tires			I	I	I	I	I	88, 93	
	**	Steering Head Bearings			I		I		I	—	

- * Should be serviced by your Honda dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 148).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.