

## Contents

### 1. Operating instructions

Operation component locations .....	1-1
Fuel .....	1-2
Coolant .....	1-2
Basic Operation .....	1-2
Odometer/Speedometer (ED/2ED) .....	1-4
Steering lock .....	1-5
Shifting gears .....	1-5
Braking .....	1-6
Parking .....	1-6
Controls .....	1-7

### 2. Service data

Specifications .....	2-1
Service data .....	2-2
Torque Values .....	2-6
Tools .....	2-8
Special .....	2-8
Lubrication & Seal Points .....	2-9
Cable & Harness Routing .....	2-12

### 3. Service and maintenance

Maintenance schedule .....	3-1
Pre-ride Inspection .....	3-1
Warming-up Inspection .....	3-2
Ride Inspection .....	3-2
After Ride Inspection .....	3-2
Replacement Parts .....	3-2
Fuel Line .....	3-3
Air Cleaner .....	3-3
Spark Plug .....	3-4
Valve Clearance .....	3-4
Engine Oil/Oil Filter .....	3-6
Engine Idle Speed .....	3-8
Transmission Oil .....	3-8
Coolant .....	3-9
Clutch System .....	3-10
Exhaust Pipe And Muffler .....	3-10
Drive Chain .....	3-11
Drive Chain Slider .....	3-11
Drive/Driven Sprockets .....	3-12
Brake Fluid .....	3-13
Brake Pad Wear .....	3-14

Brake System .....	3-14
Handlebar And Steering Head Bearings .....	3-15
Wheels And Tires .....	3-15
Front Suspension .....	3-16
Fork (ED/3ED) .....	3-16
Fork (2ED/4ED) .....	3-17
Rear Suspension .....	3-18
Front headlight and front and rear position light .....	3-19
Cleaning .....	3-20
Storage .....	3-20

### 4. Engine servicing

Oil Pressure Relief Valve .....	4-1
Oil Pump .....	4-1
Disassembly / Installation of fuel feed hose .....	4-4
Fuel Line Inspection .....	4-5
Fuel Tank/Fuel Pump .....	4-7
Injector .....	4-13
Throttle Body .....	4-13
Water Seal And Bearing Replacement .....	4-15
Radiator Removal/Installation .....	4-17
Engine Removal/Installation .....	4-18
Cylinder Compression .....	4-20
Cylinder Head Removal .....	4-23
Cylinder Head Disassembly .....	4-25
Cylinder Head Inspection .....	4-26
Valve Guide Replacement .....	4-27
Valve Seat Inspection/Refacing .....	4-28
Cylinder Head Assembly .....	4-31
Cylinder/Piston .....	4-32
Cylinder Head Installation .....	4-37
Camshaft/Cylinder Head Cover Installation .....	4-38
Right Crankcase Cover .....	4-40
Clutch Slave Cylinder .....	4-41
Clutch .....	4-43
Kickstarter .....	4-46
Gearshift Linkage .....	4-47
Left Crankcase Cover .....	4-49
Flywheel .....	4-52
Crankcase Separation/Disassembly .....	4-54
Crankshaft/Transmission Inspection .....	4-56
Crankcase Bearing Replacement .....	4-56
Transmission Assembly .....	4-58
Crankcase Combination .....	4-59

### 5. Frame servicing

Front Wheel .....	5-1
Fork .....	5-3
Steering stem .....	5-12
Rear Wheel .....	5-15
Shock Absorber .....	5-16
Shock Linkage .....	5-20
Swingarm .....	5-21
Brake pad replacement .....	5-25
Front brake caliper .....	5-28
Rear brake caliper .....	5-29
Front master cylinder .....	5-30
Rear master cylinder .....	5-31
Brake pedal .....	5-31
Clutch master cylinder .....	5-32

### 6. Electrical servicing

Charging system inspection .....	6-1
Ignition system inspection .....	6-3
PGM-FI System inspection .....	6-5
PGM-FI Self-diagnosis malfunction indicator lamp (MIL) failure codes .....	6-8
Bank angle sensor inspection .....	6-9
Engine stop switch inspection .....	6-10
Cooling fan system inspection .....	6-10
Chapter lights / instruments / switches (ED/2ED) .....	6-11
Indicator light/Indicator light relay .....	6-12
Speed sensor .....	6-15
Wiring diagram (ED/2ED) .....	6-17
Wiring diagram (3ED/4ED) .....	6-18