

- (1) SPEEDOMETER
- (2) TURN SIGNAL INDICATOR
- (3) HIGH BEAM INDICATOR
- (4) ODOMETER
- (5) MALFUNCTION INDICATOR LAMP (MIL)


Odometer/Speedometer (ED/2ED)

Instruments and indicators


The indicators are located in the speedometer.

The display has two functions, odometer and speedometer.

- Speedometer: Shows riding speed. This shows your speed in kilometers per hour (km/h).
- Odometer: Shows accumulated mileage.
- High beam indicator (blue): Lights when the headlight is on high beam
- Turn signal indicator (green): Flashes when the turn signal operates.
- Malfunction indicator lamp (MIL). When any abnormality occurs in the system, the ECM turns on the MIL.

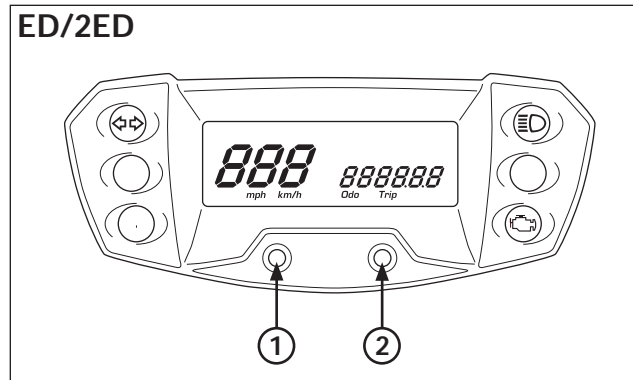

- (1) M (MODE) BUTTON
- (2) S (SET) BUTTON

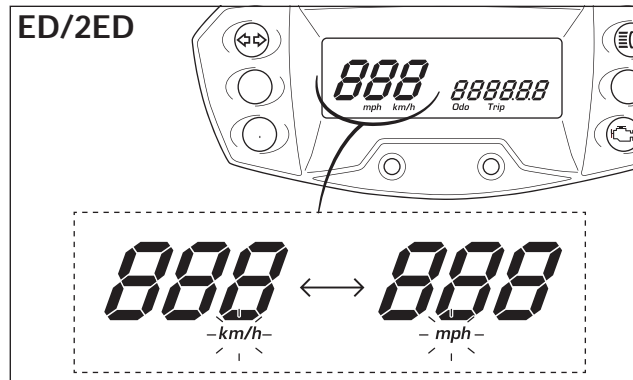


Setting mode

The main screen is used to adjust the following settings:

1. Changing the speed units

1. Start the motorcycle.
2. Press the M (Mode) button.
 - Keep it pressed for several seconds and the speed units will change from km/h to mph and vice versa, depending on their initial setting.

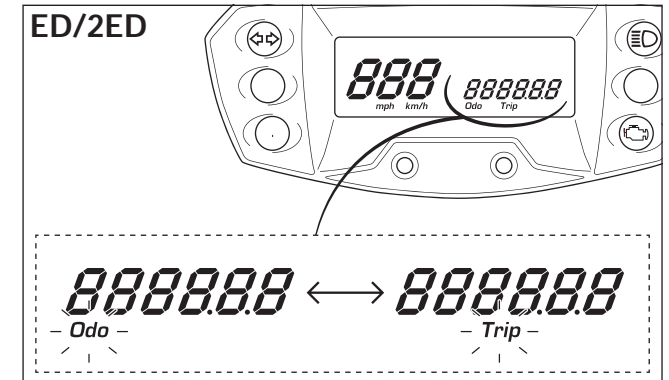

2. Changing from “Odo” to “Trip 1” display

1. Start the motorcycle.
2. Press the M (Mode) button and the “Odo” display will change to (Trip 1).
3. Press the S (Set) button.
 - Keep it pressed for several seconds and “Trip 1” will change to 0.0 km/h / mph.