


Front Top Cover

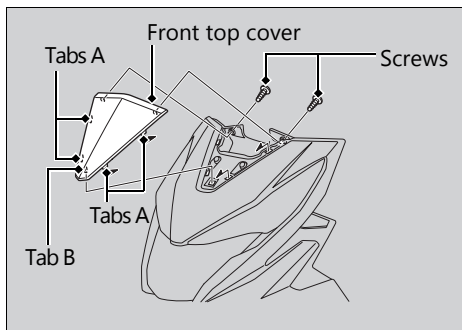

Removal

1. Remove the screws
2. Remove the front top cover by releasing the tabs A and the tab B.

Installation

Install the parts in the reverse order of removal.