


Switching the Display

The **SEL** button switches among the odometer, tripmeter A and tripmeter B. Also **SEL** button switches among the battery voltage meter, air temperature gauge and average fuel mileage.

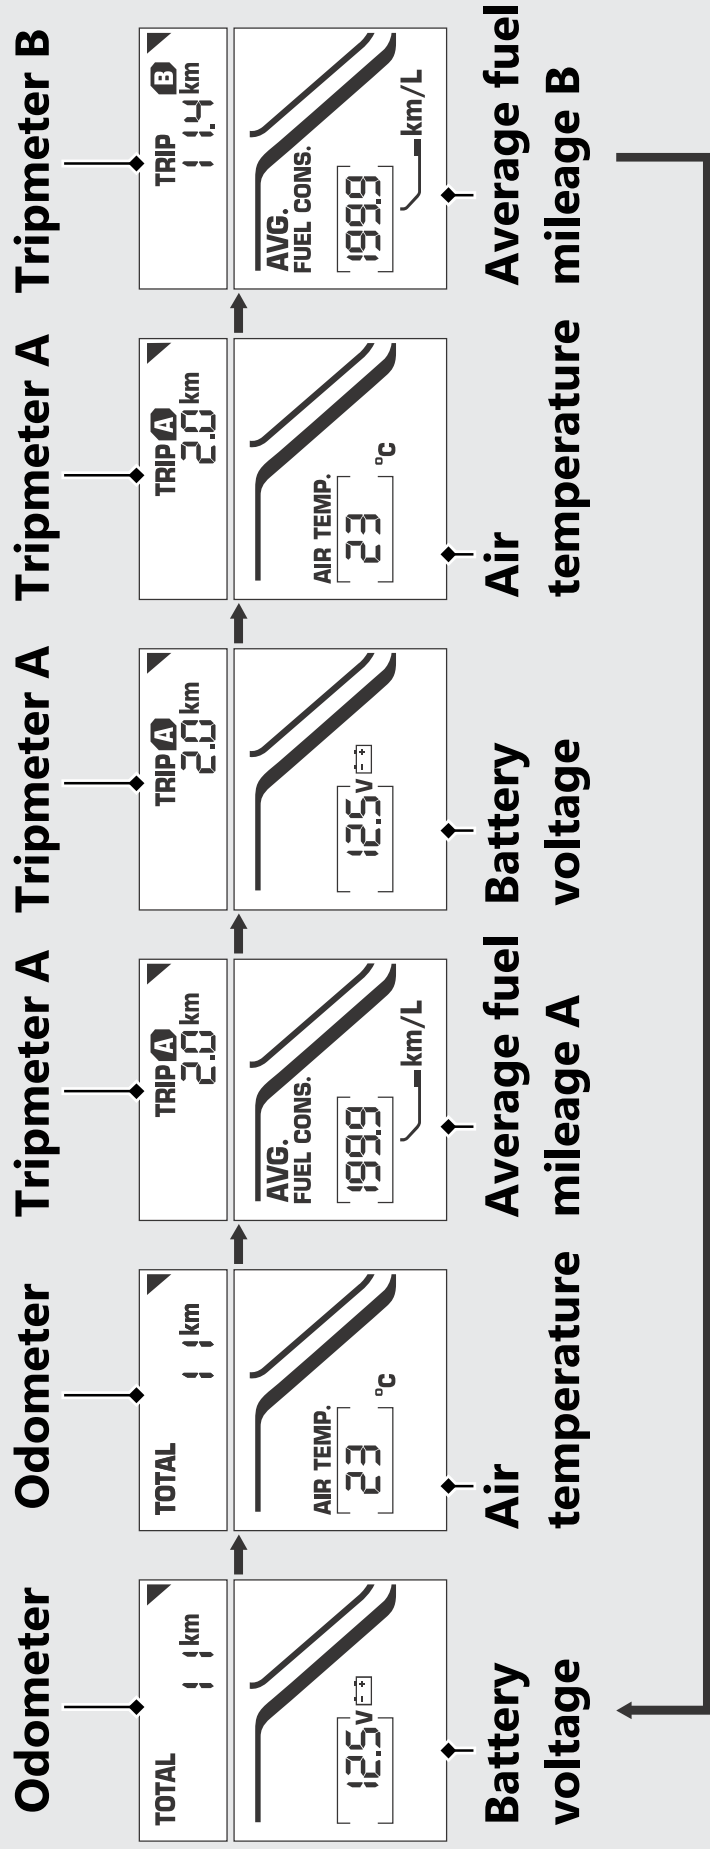

→ Press the **SEL** button