

Ignition switch

Switches the electrical system on/off, locks the steering, and operates the fuel lid and seat opener switch.

To unlock the ignition switch:



I (On)

Turns electrical system on for starting/riding.

SEAT FUEL

Operates the fuel lid and seat opener switch.

O (Off)

Turns engine off.

🔒 (Lock)

Locks steering.

