


Honda SMART Key System *(Continued)* **Switching the Honda SMART Key System**

To switch the Honda SMART Key system to activation or deactivation

Press the ON/OFF button until the Honda SMART Key LED changes colour.

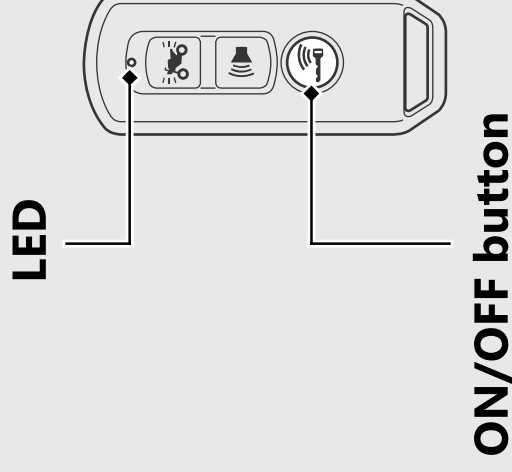

To check the Honda SMART Key system status

Lightly press the ON/OFF button. The Honda SMART Key LED will show the status.

When the Honda SMART Key LED is:

- | | |
|--------------------|--|
| Green:
(active) | Honda SMART Key system authentication can be performed. |
| Red:
(inactive) | Honda SMART Key system authentication cannot be performed. |