

## Anti-theft Alarm System (Continued)

If the ignition switch is left **O** (Off) for more than 10 days, the anti-theft alarm system will no longer operate.

When the system is active and the vehicle receives a signal from pressing the answer back or alarm button, system activation will be extended for 10 days.

To reset the system, turn the ignition switch **I** (On) once.

The anti-theft alarm system uses low-intensity radio waves. It may affect medical equipment such as a cardiac pacemaker.


When the battery in the vehicle is weak, the anti-theft alarm system may not function.

### Setting the Anti-theft Alarm System

- 1 Turn the ignition switch to **O** (Off) or **I** (Lock) position.
- 2 Press the alarm button. Within a second, the turn signal light blinks and the buzzer rings 1 time. After 2.5 seconds, the buzzer rings 1 time. The anti-theft alarm system is activated.

The alarm indicator flashes while the anti-theft alarm system is activated.

#### Alarm button

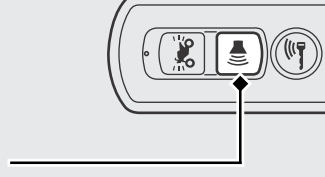

#### Alarm indicator

