


- 1 Place the vehicle on its centre stand.
- 2 Turn the ignition switch to the **I** (On) position.

▲ To unlock the ignition switch. **▶P.34**

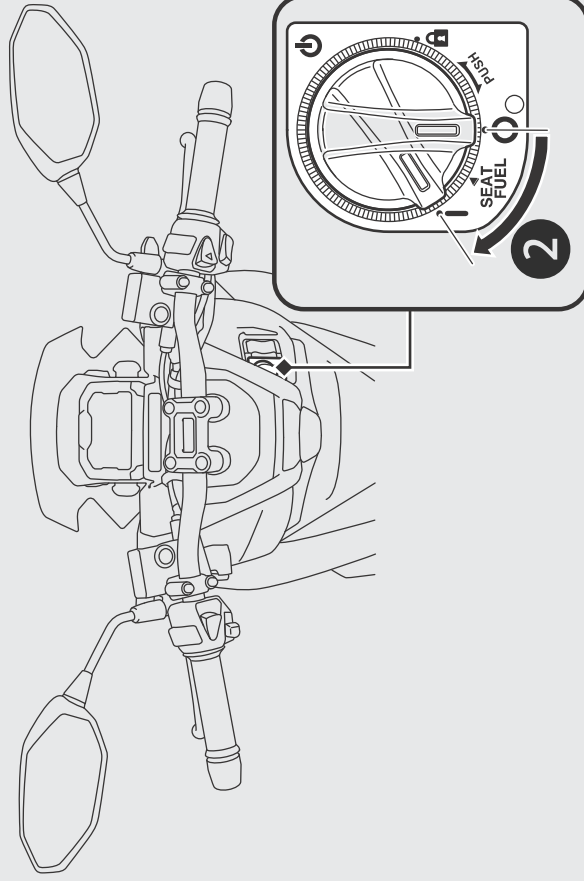

- 3 Squeeze the rear brake lever.

▲ The starter motor will only work when the rear brake lever is squeezed and the side stand is up.

- 4 With the throttle completely closed, press the start button.

