



RECOIL STARTER/ALTERNATOR/STARTER CLUTCH

INSPECTION

Remove the one way clutch rollers, plungers and springs from the flywheel and check them for wear or damage.

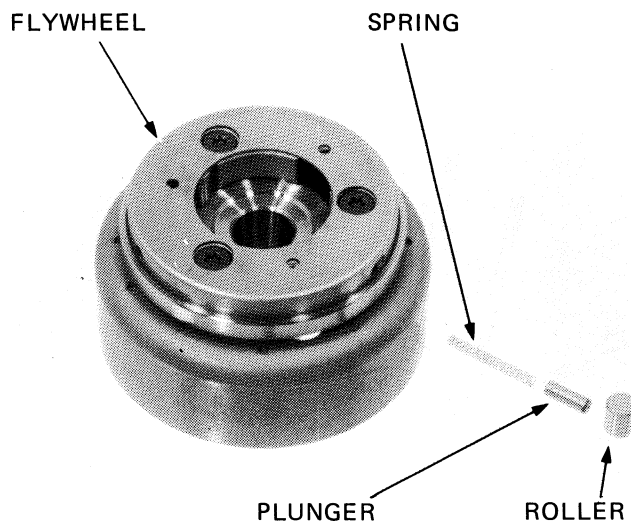

Check the needle bearing and starter driven gear for wear or damage and replace if necessary.

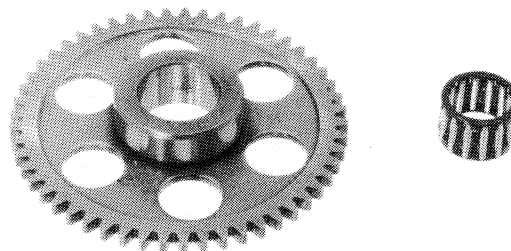

INSTALLATION

Install the starter driven gear collar over the crankshaft with its chamfered I.D. facing out.
Install the starter driven gear and needle bearing.
Install the flywheel (Page 9-8).
Install the left crankcase cover (Page 9-9).
Install the recoil starter (Page 9-6).

