



AXLE DISASSEMBLY

Remove the O-ring from the rear axle.

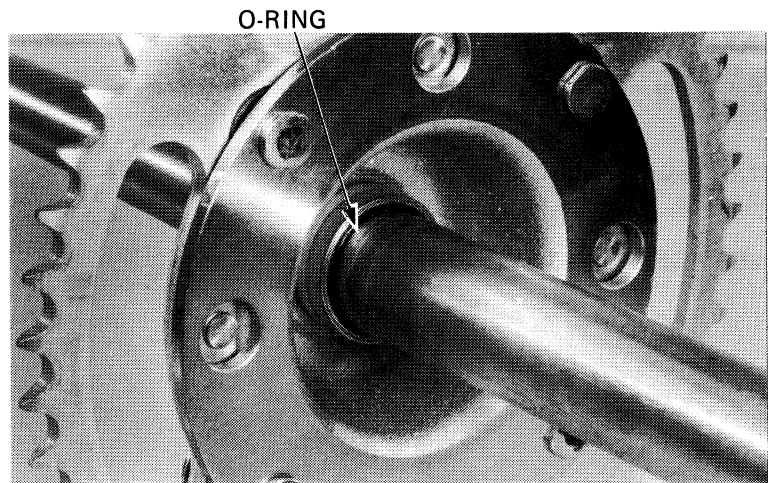

Remove the four damper cover nuts and damper cover.
Remove the snap ring and driven sprocket from the axle.

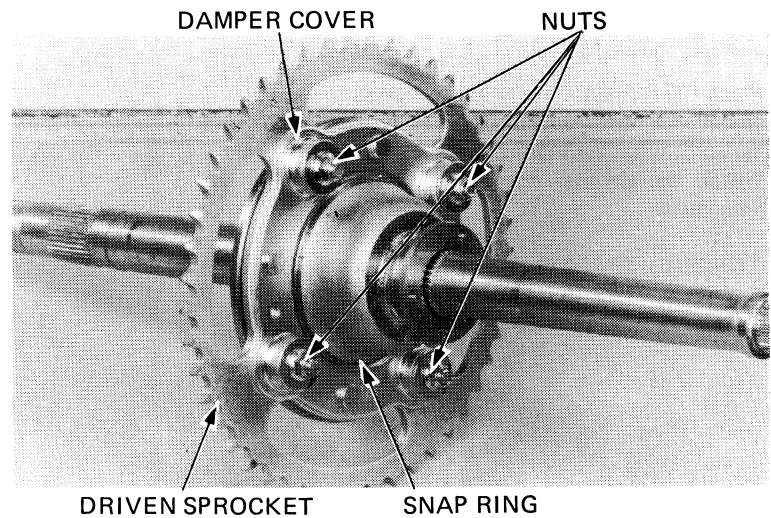

FINAL DRIVEN SPROCKET INSPECTION

Check the damper rubbers for damage. Replace if necessary.

Check the condition of the final driven sprocket teeth.

Replace the sprocket if it is worn or damaged.

NOTE

- If the driven sprocket is worn or damaged, the drive chain and the drive sprocket must be inspected.
- Never install a new drive chain on worn sprocket or a worn chain on new sprockets. Both chain and sprocket must be in good condition or the replacement chain or sprockets will wear rapidly.

