



HONDA ATC 250R

HOW TO USE THIS MANUAL

Sections 1 and 2 apply to the whole ATC while sections 3 through 15 describe parts of the ATC, grouped according to location.

Find the section you want on this page, then turn to the table of contents on page 1 of that section.

Most sections start with an assembly or system illustration, general instructions, specifications, torque values, general instructions, tools and troubleshooting for the section. The subsequent pages give detailed procedures.

If you don't know the source of a problem, see section 16, TROUBLESHOOTING.

Refer to section 17 for 1982 service information and section 18 for 1983 service information.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT NOTICE AND WITHOUT INCURRING ANY OBLIGATION WHATEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

HONDA MOTOR CO., LTD.
Service Publications Office

CONTENTS

	GENERAL INFORMATION	1
	MAINTENANCE	2
ENGINE	FUEL SYSTEM	3
	ENGINE REMOVAL/INSTALLATION	4
	CYLINDER HEAD/CYLINDER/PISTON	5
	AC GENERATOR	6
	CLUTCH/CLUTCH ARM	7
	SHIFT LINKAGE/BALANCER GEAR	8
	KICK STARTER/TRANSMISSION/CRANKSHAFT	9
	FRONT WHEEL/SUSPENSION/STEERING	10
CHASSIS	BRAKE MECHANISM (FRONT DISC BRAKE)	11
	REAR WHEEL/BRAKE/DRIVE MECHANISM	12
	SUSPENSION	13
	REAR FENDER/EXHAUST PIPE	14
	ELECTRICAL SYSTEM	15
	TROUBLESHOOTING	16
	'82 ADDENDUM	17
'83-'84 ADDENDUM	18	