

**MAINTENANCE**

Rim runout:	Axial	4.0mm (0.15 in)
	Radial	4.0mm (0.15 in)
Front/rear tire size		22 x 11 – 8.0 DUNLOP ATV tire
Front/rear tire pressure		15 kPa (0.15 kg/m <sup>2</sup> , 2.2 psi)
Front/rear tire circumference		1,760mm (69.3 in)
Front suspension air pressure		10 – 50 kPa (0.1 – 0.5 kg/cm <sup>2</sup> , 1.4 – 7.0 psi)
Rear suspension preload		10mm (0.47 in)

**TORQUE VALUE**

Oil drain plug                      20 – 25 N-m (2.0 – 2.5 kg-m, 14 – 18 ft-lb)

**MAINTENANCE SCHEDULE**

The maintenance intervals shown in the following schedule are based upon average riding conditions. Machines subjected to severe use, or ridden in unusually dusty areas, require more frequent servicing.

I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary C: Clean                      R: Replace A: Adjust                      L: Lubricate		INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operation days)	Refer to page
TRANSMISSION	NOTE (1), (2)	R	R	
AIR CLEANER ELEMENT	NOTE (2)		C	2 – 4
SPARK PLUG			I	2 – 5
CARBURETOR		I	I	2 – 8
FUEL LINE		I: (EVERY YEAR)		2 – 8
FUEL STRAINER		C: (EVERY YEAR)		2 – 8
THROTTLE OPERATION		I	I	2 – 7
DRIVE CHAIN		I.L	I.L	2 – 9
BRAKE SHOES/PADS	NOTE (3)	I: (EVERY YEAR)		2 – 12
CHAIN SLIDER		I	I	2 – 11
FRONT FORK OIL/AIR			R: (EVERY YEAR)	2 – 15
FRONT BRAKE FLUID		I	IR: (EVERY YEAR)	2 – 12
SUSPENSION			I	2 – 16
SWINGARM BEARING		I.L	I.L	13 – 12
BRAKE CONTROL LINKAGE		I	I	2 – 12
CLUTCH		A	A	2 – 6
SPARK ARRESTER			C	14 – 2
ALL NUTS, BOLTS, FASTENERS		I	I	
LIGHTING EQUIPMENT		I	I	2 – 16
TIRES		I	I	2 – 14
STEERING HEAD BEARING		A: (EVERY YEAR)		2 – 15

NOTE: (1) Replace every 30 operating days or every 3 months, whichever comes first.  
(2) Service more frequently when riding in dusty areas  
(3) Service more frequently after riding in very wet or muddy conditions.