




MAINTENANCE


Be sure the brake pedal is properly adjusted (page 2-13). Turn the adjusting nut at the brake cable end until the clearance between the arm joint and arm is 0–1.0 mm (0–0.04 in).

Minor adjustments can be made by loosening the lock nut at the lever and turning the adjusting bolt.

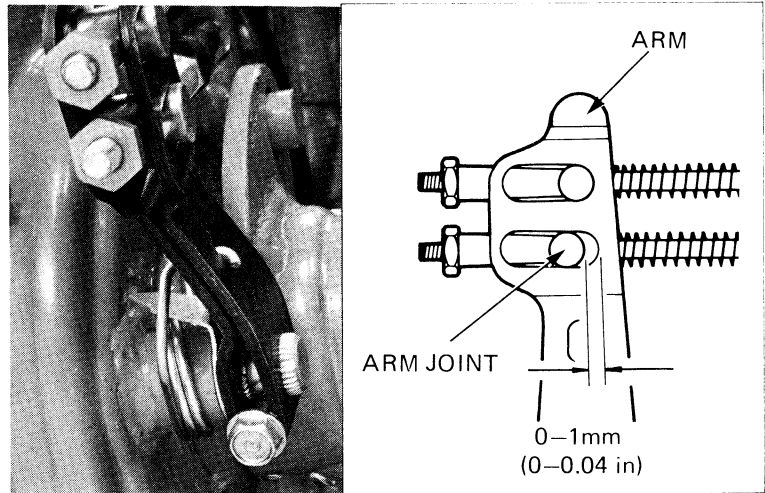

BRAKE WEAR

Replace the brake shoes if the indicator plate aligns with the brake panel index mark when the rear brake pedal is applied.

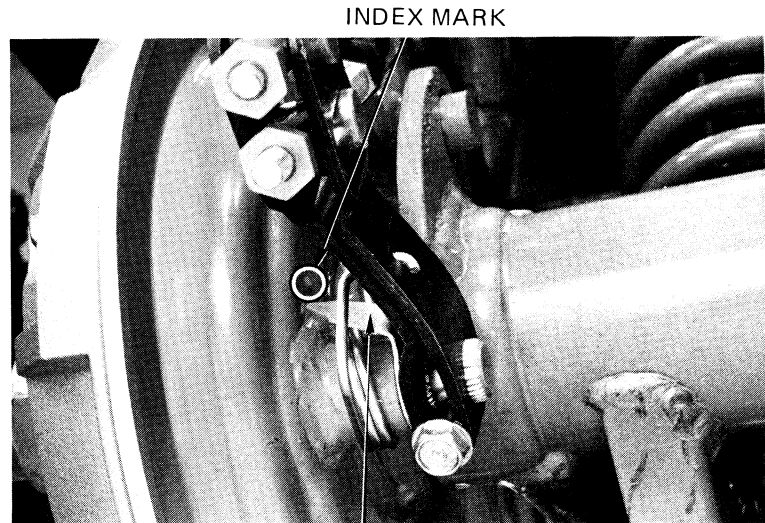

TIRES

Check the tire for cuts, imbedded nails, or other sharp objects.

NOTE

Tire pressure should be checked when the tires are COLD.

Check the tire pressure and measure the tire circumference.

TIRE PRESSURES:

Recommended pressure:

15 kPa (0.15 kg/cm², 2.2 psi)

Minimum pressure:

12 kPa (0.12 kg/cm², 1.7 psi)

Maximum pressure:

18 kPa (0.18 kg/cm², 2.6 psi)

STANDARD TIRE CIRCUMFERENCE:

1,760 mm (69.3 in)

