




CYLINDER HEAD/CYLINDER/PISTON

Remove the spark plug.
Remove the six flange nuts attaching the cylinder head to the cylinder.

NOTE

To avoid warping the cylinder head, use a criss-cross pattern to loosen each nut about 1/4 turn, then remove the nuts.


CYLINDER HEAD

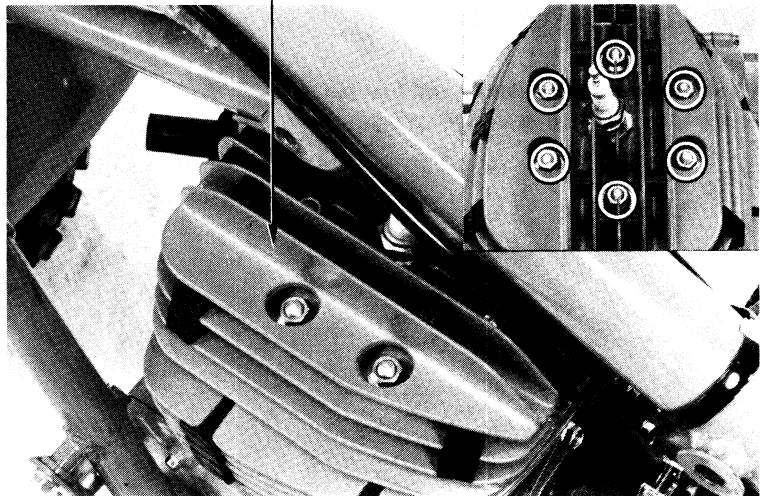

INSPECTION

Check the cylinder head for warpage with a straight edge and feeler gauge in the directions shown.

SERVICE LIMIT: 0.20 mm (0.008 in)

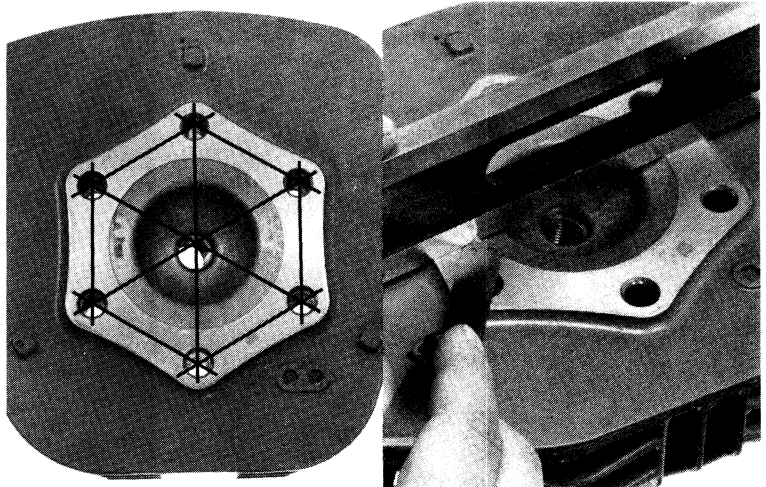

DECARBONIZING

Remove the carbon deposits from the combustion chamber.

Clean the head gasket surface of any gasket material.

NOTE

Avoid damaging the gasket surfaces.

