


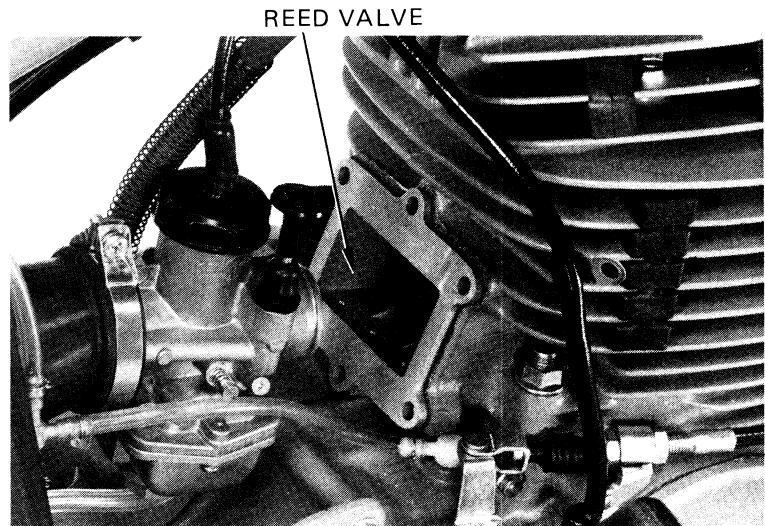

Remove the reed valve from the cylinder.




REED VALVE INSPECTION

Check the reed for damage or fatigue and replace if necessary. Replace the valve with a new one if the seat rubber is cracked or damaged, or if there is clearance between the reed and seat.

CAUTION:

Do not disassemble or bend the reed stopper as this may cause improper engine performance. The reed valve must not be disassembled. If the stopper, reed or seat is faulty, replace the assembly.

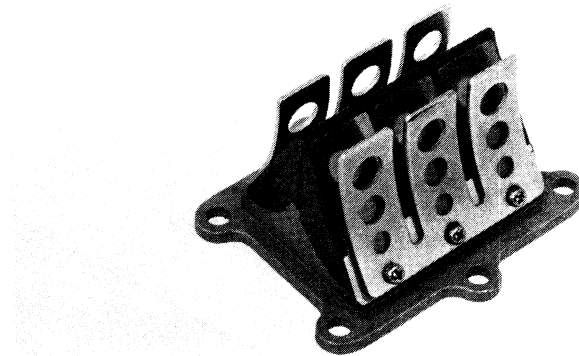

REED VALVE INSTALLATION

Installation of the reed valve is essentially the reverse order of removal.

NOTE

After installation, check for secondary air leaks around the reed cage and intake pipe.

