



# 6. AC GENERATOR

|                           |       |
|---------------------------|-------|
| SERVICE INFORMATION       | 6 - 1 |
| AC GENERATOR REMOVAL      | 6 - 2 |
| AC GENERATOR INSTALLATION | 6 - 4 |

## SERVICE INFORMATION

### GENERAL INSTRUCTIONS

- The AC generator can be serviced without removing it from the engine. Do not remove the pulse generator from the stator base.
- For AC generator inspection, refer to Section 15.

### TOOLS

|                  |                                |
|------------------|--------------------------------|
| Common           |                                |
| Universal Holder | 07725-0030000                  |
| Flywheel Puller  | 07733-0010000 or 07933-0010000 |