


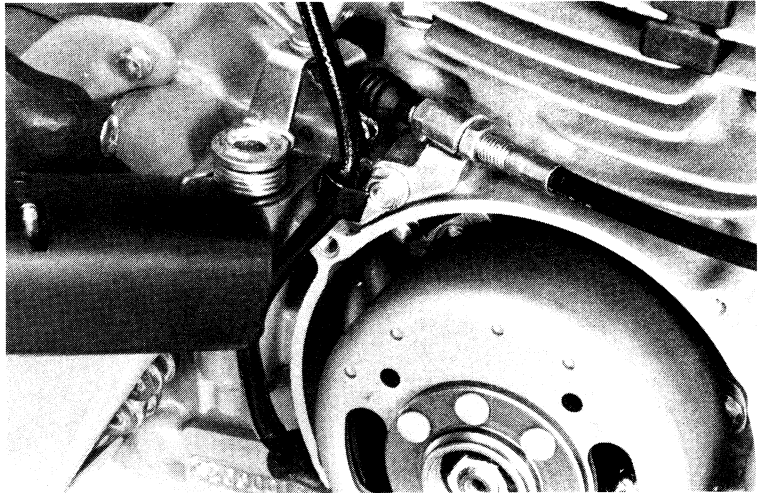

After installing the flywheel, start the engine and inspect the ignition timing (Page 2-7).



Install the generator cover and cover guard.

