



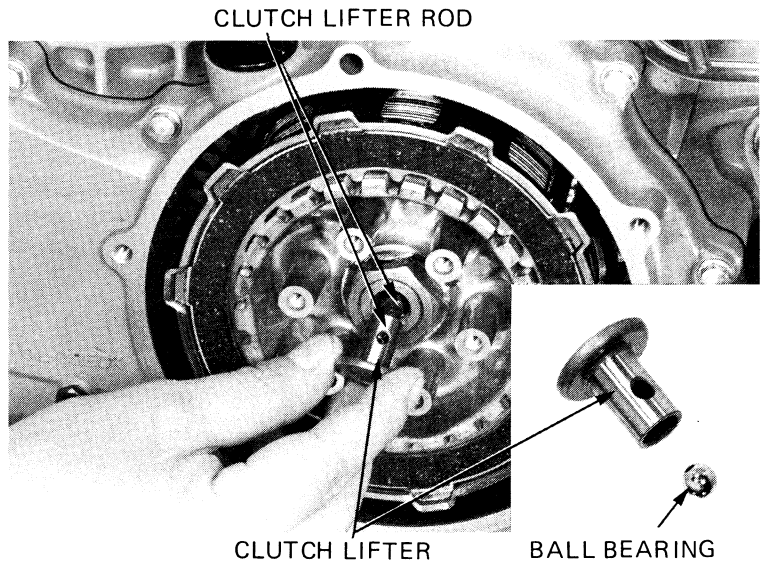

Remove the clutch lifter, steel ball and clutch lifter rod.

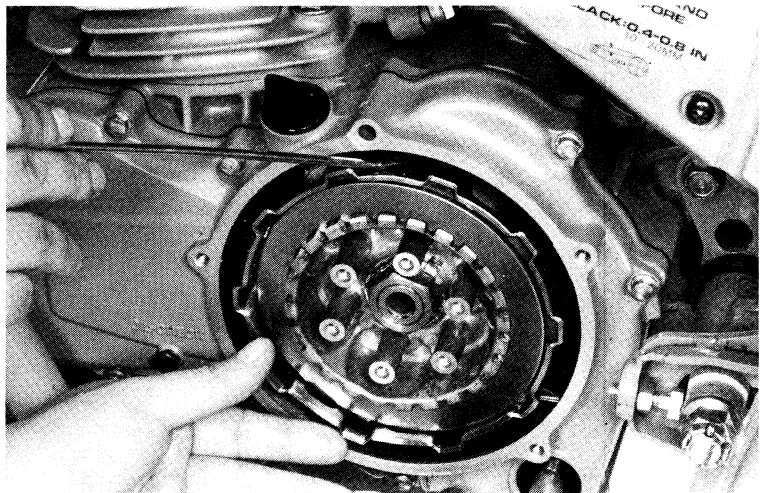

Remove the seven clutch friction discs and six clutch plates.



Straighten the tabs of the lock washer.

