





## CLUTCH ARM

### CLUTCH ARM REMOVAL

Remove the clutch lifter rod. (Page 7-3).

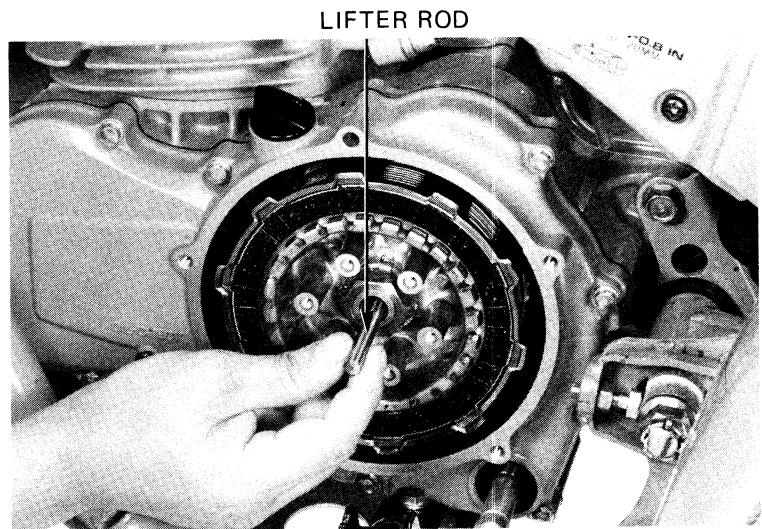

Disconnect the clutch cable from the clutch arm.  
Remove the screw attaching the clutch arm, and  
remove the clutch arm.

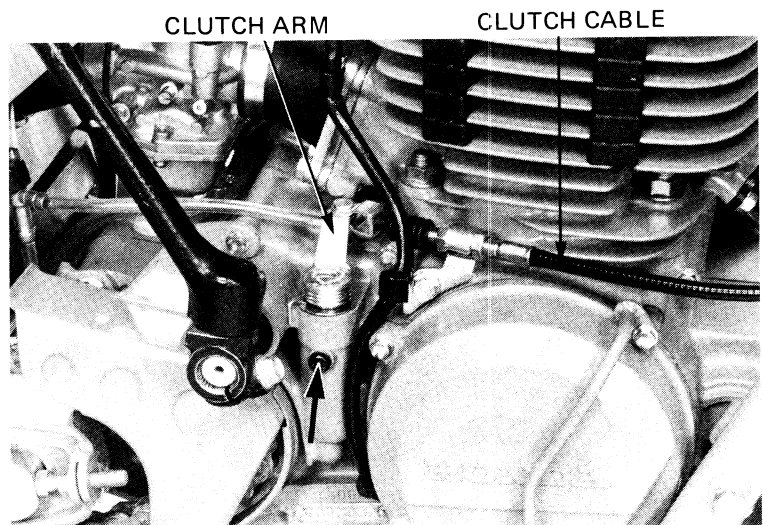

Check the O-ring for damage, fatigue or other faults.  
Check the clutch arm for bending.

The installation sequence is essentially the reverse  
order of removal.

#### NOTE

Apply grease to the clutch lifter shaft before  
assembly.

