



SERVICE INFORMATION	8 - 1
SHIFT LINKAGE	8 - 2
BALANCER GEARS	8 - 6

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- This section includes shift linkage and balancer gear repairs which require left crankcase cover removal.
- The engine must be removed from the vehicle before performing repairs on the shift linkage or balancer (Section 4).

Engine removal	Section 4
Clutch removal	Section 7

TOOL

Special Gear holder	07924-KA50000	Equivalent tool is commercially available in USA.
---------------------	---------------	---

