


Install the kick starter in the crankcase with the drive ratchet resting against the guide plate stopper as shown.

Install the kick return spring.


Install the kickstarter lever temporarily and check the operation of the kickstarter.

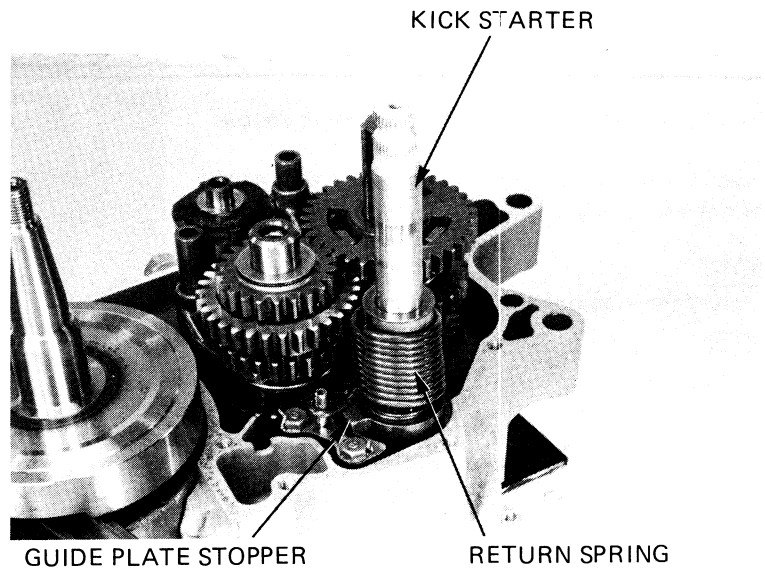

TRANSMISSION

SHIFT FORK/SHIFT FORK SHAFT/ SHIFT DRUM REMOVAL

Remove the two shift fork shafts.

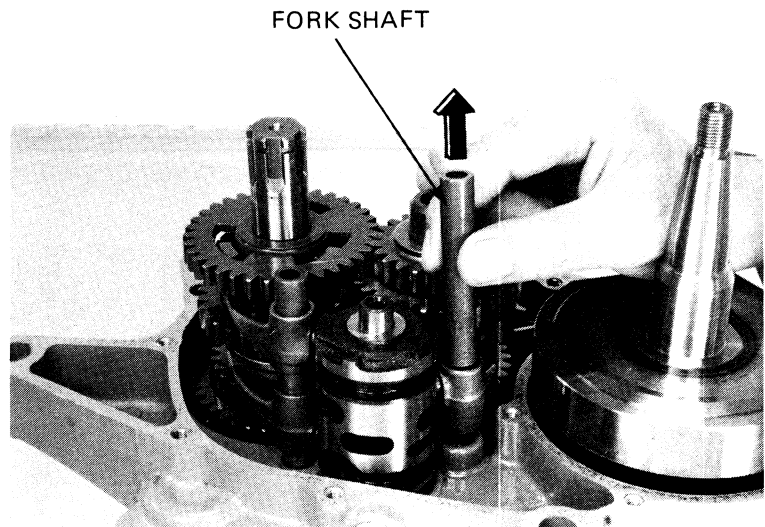

Remove the shift drum and shift forks.

NOTE

The shift forks are identified with "R", "C" and "L" for right, center and left positions, respectively.

