




HEADLIGHT

HEADLIGHT CASE REMOVAL

Remove the two screws and bolt attaching the headlight case to the headlight case brackets.



Disconnect the headlight coupler from the headlight and remove the headlight and case as an assembly.

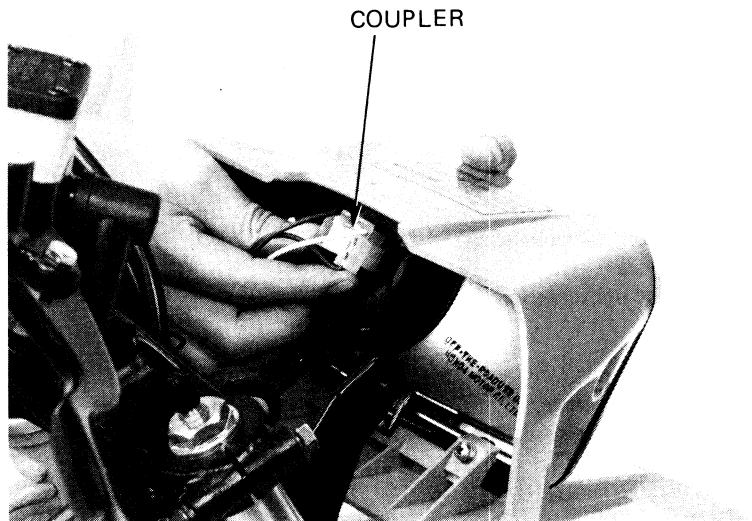

Separate the headlight from the headlight case by removing the two screws.

