




REAR BRAKE


REMOVAL

Remove the left rear wheel (Page 12-3).
Remove the cotter pin and hub nut and remove the wheel hub.

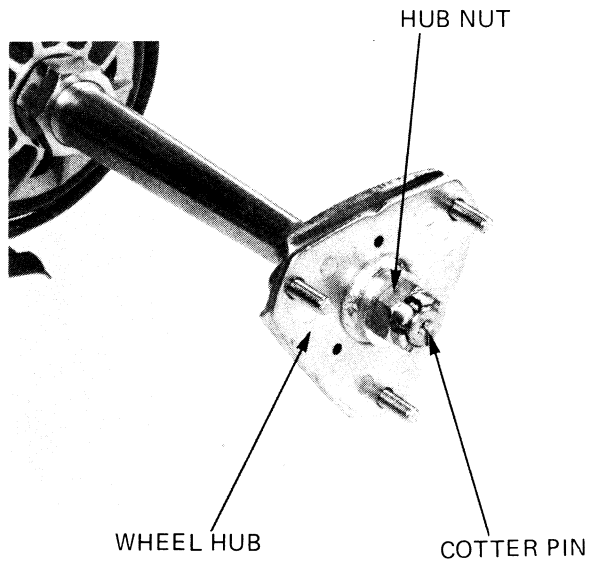

LOCK NUT WRENCH 41 mm
07916-9180000 or COMMERCIALY AVAILABLE 41 mm

Remove the rear axle nuts.
Remove the tongued washer and rear brake drum.

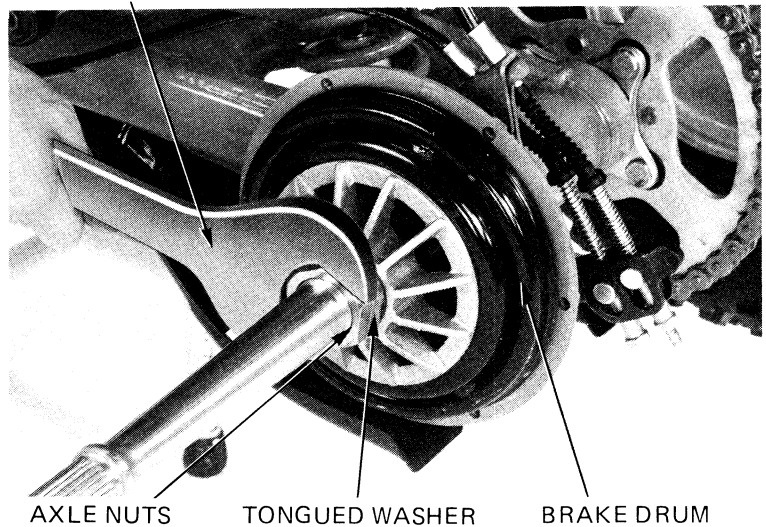

PARKING BRAKE CABLE REAR BRAKE CABLE

Remove the rear and parking brake cables from the rear brake panel.

Remove the rear brake panel from the rear axle shaft.

