




Coat the dust seal with a small amount of clean engine oil.


Install the dust seal and side ring onto the axle.

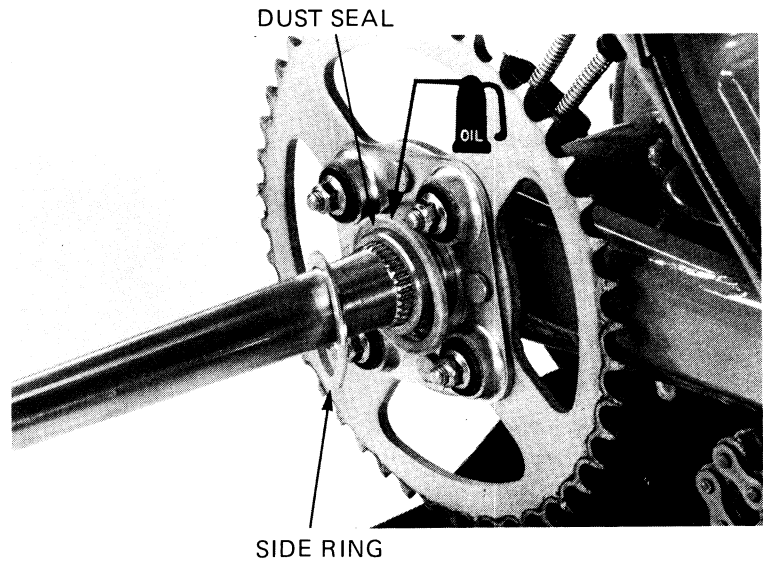

Install the snap ring with the snap ring pliers.

NOTE

Install the snap ring with the chamfered end toward the sprocket.

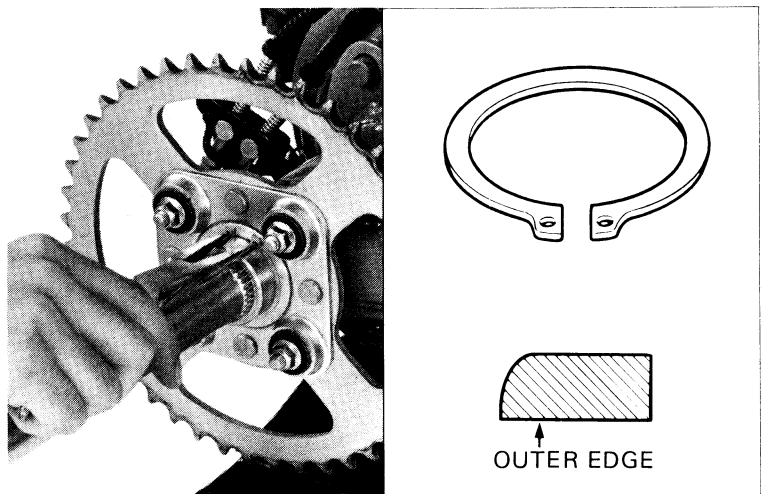

Install the drive chain.

Be sure to install the master link with the open end facing opposite the normal direction of wheel rotation.

Install the rear wheel hub and wheel.
Torque the hub and wheel nuts.

TORQUES:

Hub nut: 80–100 N-m (8.0–10.0 kg-m,
58–72 ft-lb)

Wheel nut: 18–25 N-m (1.8–2.5 kg-m,
13–18 ft-lb)

Install a new cotter pin.

Adjust the drive chain slack (Page 2-9).

Lubricate the drive chain (Page 2-10).

