




ELECTRICAL SYSTEM

IGNITION COIL

IGNITION COIL REMOVAL

Remove the spark plug cap from the spark plug.
Disconnect the wires.
Remove the ignition coil.

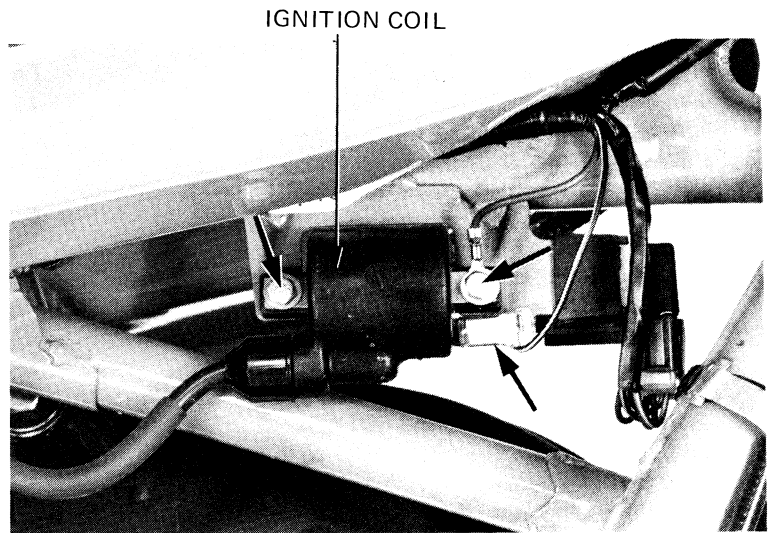

IGNITION COIL INSPECTION


Check the resistance between the leads of the primary and secondary coils:

Primary coil: 0.2–0.8Ω

Secondary coil: 8–15 kΩ

IGNITION COIL INSTALLATION

Install the ignition coil in the reverse order of removal.

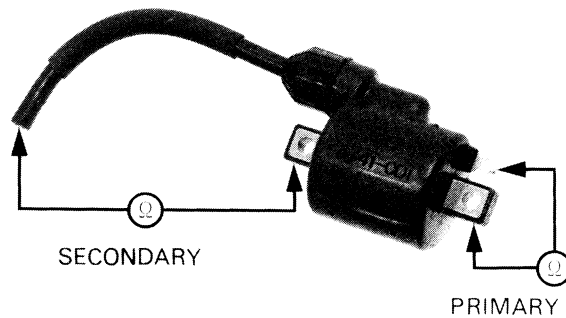

AC GENERATOR

Disconnect the A C generator coupler and test as follows:

NOTE

It is not necessary to remove the stator coil to make this test.

LIGHTING COIL

The lighting coil is correct if there is continuity between the yellow wire and ground.

EXCITER COIL

The exciter coil is normal if there is specified resistance between the black/red wire and ground.

SPECIFICATION: 245Ω

