


Remove the pin bolts and brake pads.

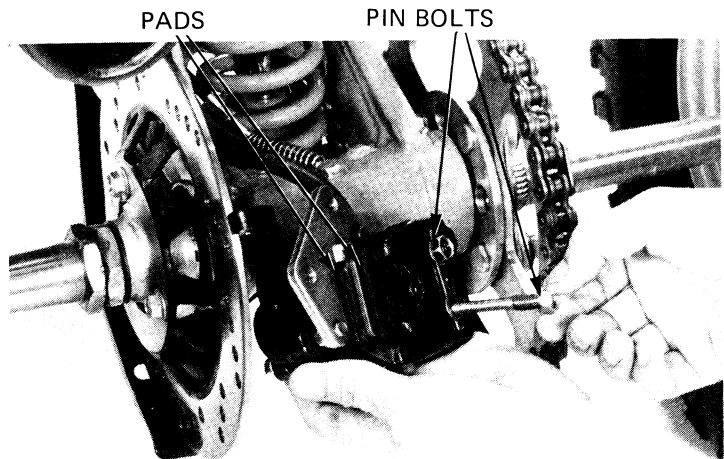

Clean the brake caliper.

Install the pad spring on the caliper.

Install new brake pads and shims on the caliper bracket.

Install the pin bolts loosely.

NOTE


- Replace both pads as a set.
- Install the shim on the back of the pad.
- Place the caliper bracket between the tabs of the brake pad spring.

Tighten the pin bolts to the specified torque.

**TORQUE: 15-20 N·m (1.5-2.0 kg-m,
11-14 ft-lb)**

Install the caliper on the swingarm.

**TORQUE: 18-25 N·m (1.8-2.5 kg-m,
13-18 ft-lb)**

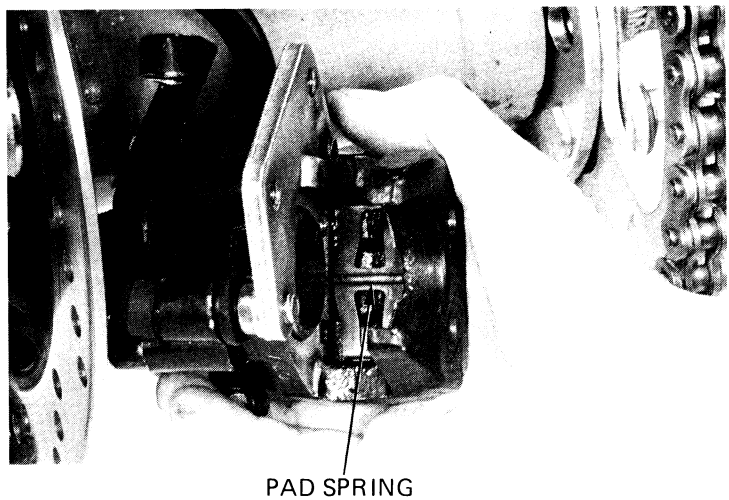

BRAKE DISC INSPECTION

Measure the brake disc thickness.

SERVICE LIMIT: 3.0 mm (0.12 in)

