


## REAR AXLE

### REMOVAL


Raise the rear wheels off the ground with a jack or block under the engine.

Remove the rear wheel nuts.

Remove the rear wheels.

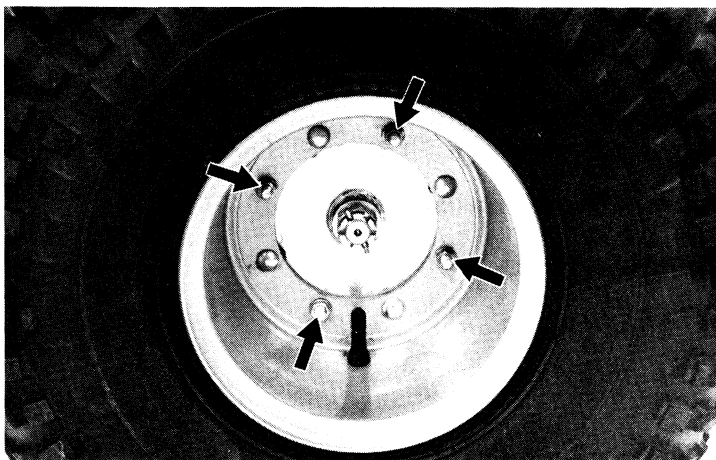

Remove the cotter pin and hub nut and remove the wheel hub.

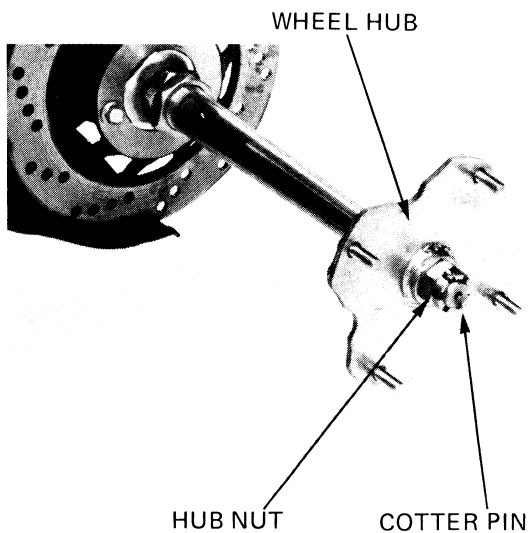

Remove the chain clip.

Remove the master link and drive chain.

CHAIN CLIP

