




Install the drive chain.

Be sure to install the master link with the open end facing opposite the normal direction of wheel rotation.

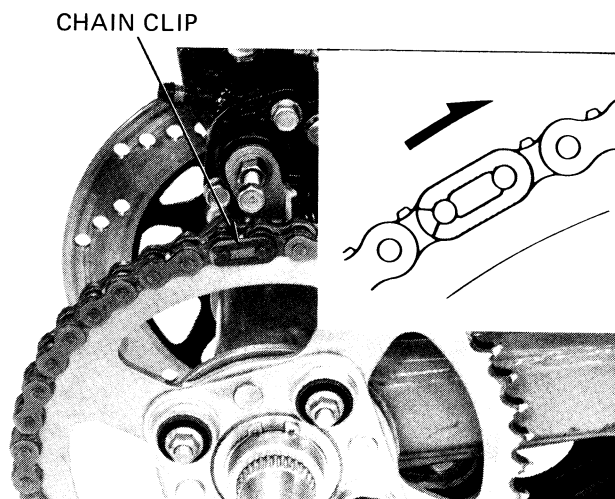

Install the rear wheel hub and wheel.

Torque the hub and wheel nuts.

TORQUE VALUES:

**Hub nut: 80-100 N·m (8.0-10.0 kg-m,
58-72 ft-lb)**

**Wheel nut: 18-25 N·m (1.8-2.5 kg-m,
13-18 ft-lb)**

Install a new cotter pin.

Adjust the drive chain slack (page 2-9).

